

## MIYOTA

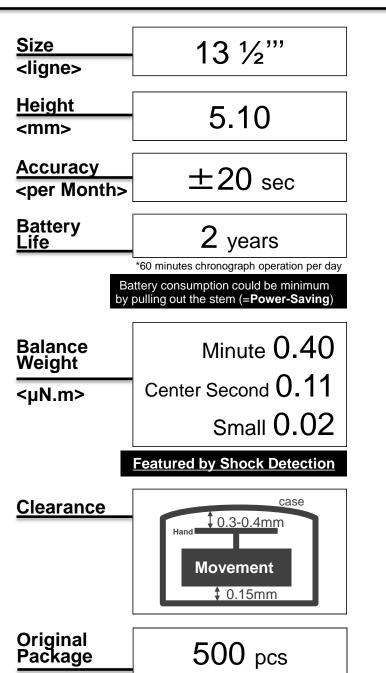

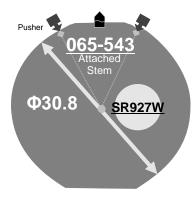





Retrograde Chronograph 1/20 sec.





Chronograph Minute 24 Hour

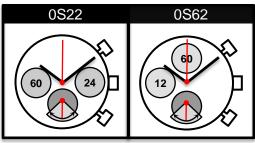

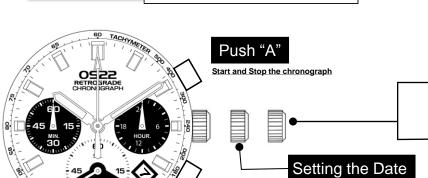

Push "B"
Reset the chronograph

DO NOT set Date between 9:00pm – 1:00am Setting the Time

Set CHRONOGRAPH hands to reset

Push A to reset the hands position to the ZERO position, And continue to push A to put them forward

