# **MIYOTA** Cal. JS20 / JS55 STOPWATCH




## 1. Basic Specification

Calibre	JS20	)	JS55	
Ligne		12 1/2		
Overall diamete	er	Ф28.2 × 26.0 (3Н-9Н)		
Case fitting diame	eter	Ф27.6×26.0(3Н-9Н)		
Total height		4.18mm		
Date		×		
Battery Life	* 30m	Approx.2years * 30minutes chronograph operation per day		
Battery	SILVE	SILVER OXIDE SR621SW or equivalent		
< Time Standard > Type of quartz: Tuning fork type quartz crystal Frequency : 32,768Hz Accuracy : ±20 second / month worn under normal circumstances				
< Balanceable weigh	t of hand >			

Minute hand Max. 0.4 μN.m Second hand Max. 0.09 μN.m Other small hands Max. 0.02 μN.m

< Function >

Stopwatch 1 sec. basis (Up to 29 min. 59 sec.) Powercell Saving Reset Mechanism(PSRM) Over-loading Compensation Device(OLCD) Digital Frequency Control(DFC) for time adjustment

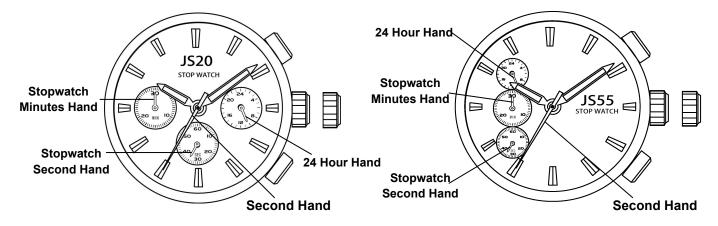

## 2. Separated Parts

Setting stem	065- 505 × 1
Length from movement center to far end of	20.03mm
setting stem	
Thread	Φ0.9mm × 11.68mm

## 3. Others

#### \* Measurement of time rate

The unit(gate) time of measurement must be set at "10 sec." or integer fold value of 10 sec. Owing to the DFC system, and the measurement must be performed in the form of complete watch.

#### \* Marking on movement


## JAPAN MIYOTA CO. ( CAL. NO.) NO JEWELS

#### \* Typical clearance

Mov't - Caseback	minimum 150 microns		
Top of hands - Glass	300 - 400 microns *		
* subject to the glass, case structure, and the length of hand			

## 4. Instruction Manual

### [Displays and Buttons]

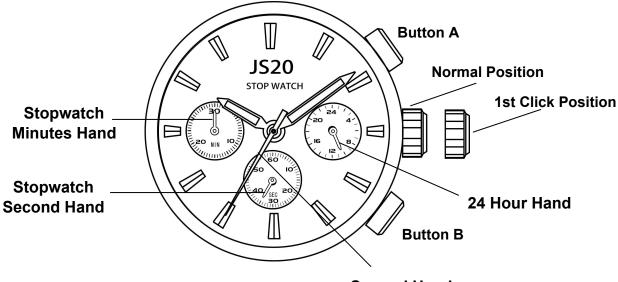

Second Hand

#### A) SETTING THE TIME

- 1. Pull the crown out to the 1st Click Position.
- 2. Turn the crown to set hour and minute hands.

#### **B) USING THE STOPWATCH**

This stopwatch is able to measure and display time in 1/1 second united up to maximum of 30 minutes. Stopwatch will stop automatically after running continuously for 30 minutes.

#### [Measuring time with the stopwatch]

- 1. Press button " A " to start the stopwatch.
- 2. The stop watch can be started and stopped each time button "A" is pressed.
- 3. Pressing button "B" resets the stopwatch and stopwatch minute and second hands return to their Zero positions.



#### C) STOPWATCH RESET (INCL. AFTER REPLACING BATTERY)


This procedure shoud be performed when the stopwatch second hand does not return to the Zero second.


- 1. Pull the crown out to the 1st Click Position.
- 2. Press the button "A" once to set the stop watch second hand to the Zero position.
  - \* The stopwatch minutes hand is syncronized with stop watch second hand.
  - \* The stopwatch second hand can be advanced rapidly by continuously pressing button "A".
- 3. Once the hands been zeroed, reset the time and return the crown to its normal position.

These specifications might be changed without prior notice.


## CITIZEN WATCH CO., LTD.



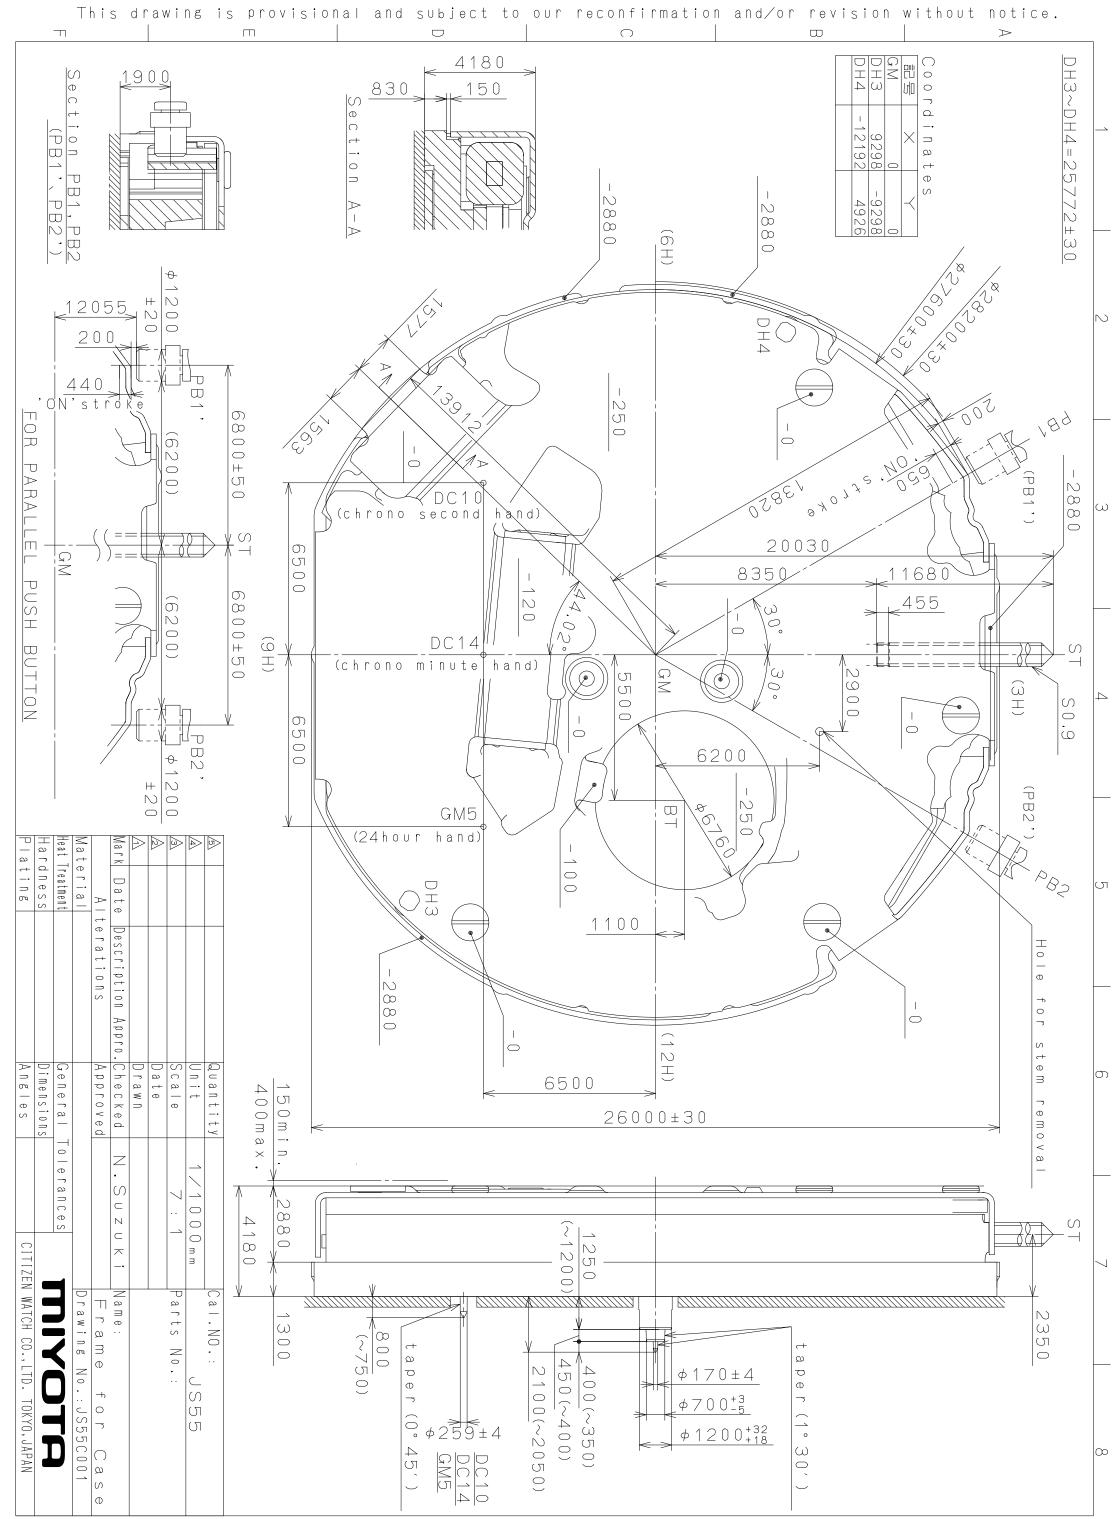

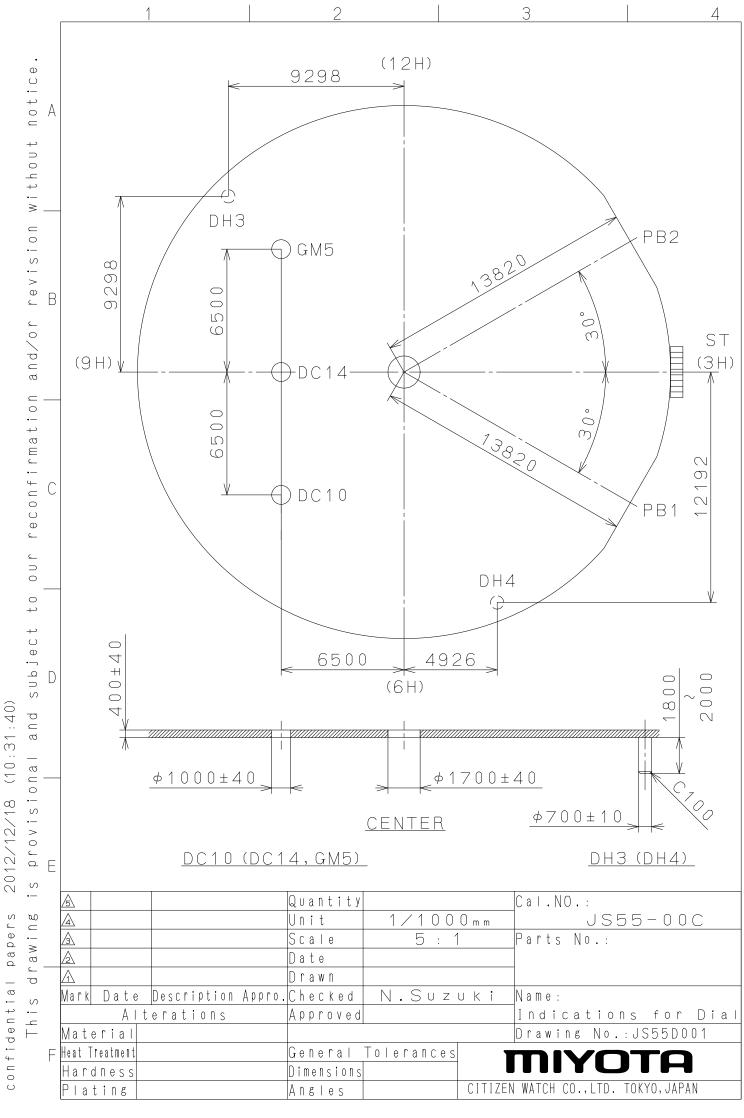

confidential papers

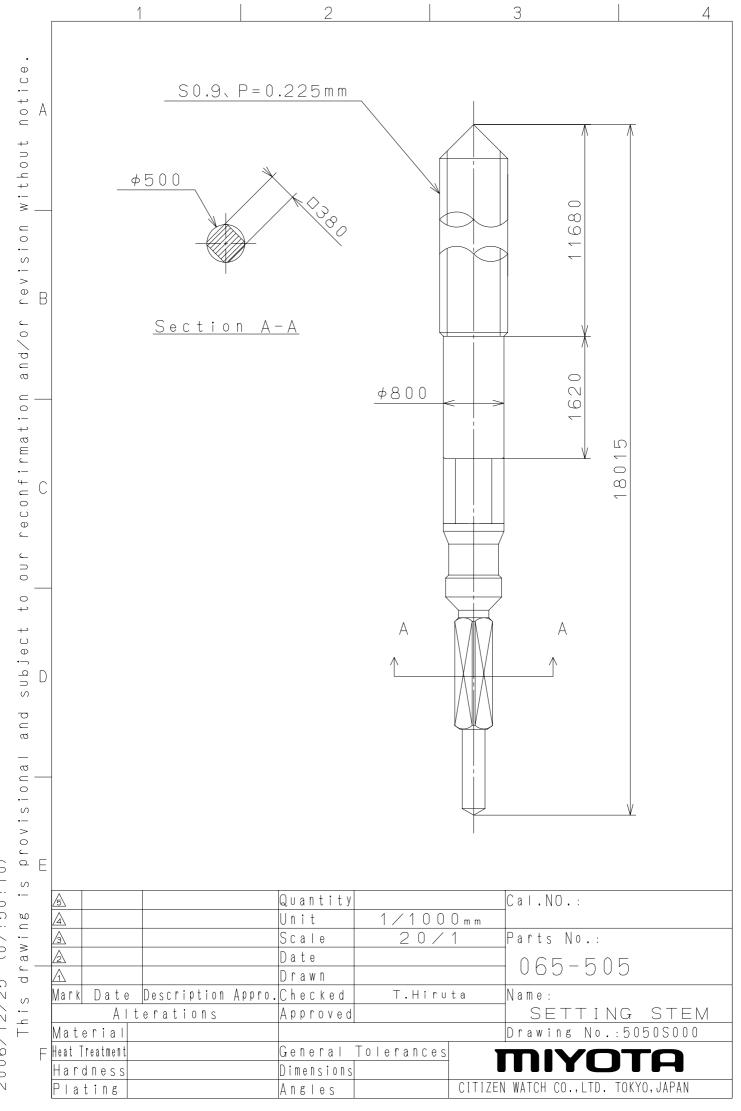

2006/12/25 (07:50:10)